



# nüvi® 1460 quick start manual




August 2009

© 2009 Garmin Ltd. or its subsidiaries  
190-01073-25 Rev. A

Printed in Taiwan
 
## Looking at Your nüvi

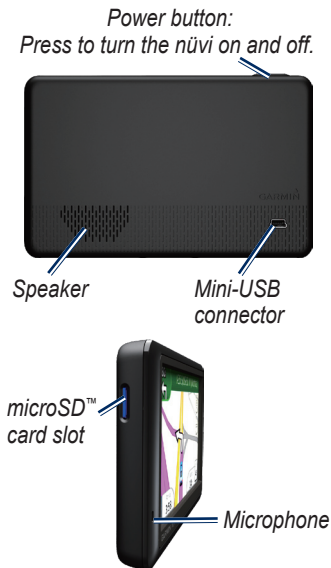

## Using the Main Menu



 
 
- 1 GPS satellite strength.
- 2 Bluetooth® technology status.
- 3 Touch to select a usage mode.
- 4 Current time. Touch to change time settings.
- 5 Battery status.
- 6 Touch to find a destination.
- 7 Touch to view the map.
- 8 Touch to make a call when connected to a [compatible mobile phone](http://www.garmin.com/bluetooth/). (Go to [www.garmin.com/bluetooth/](http://www.garmin.com/bluetooth/) to determine whether your mobile phone with Bluetooth® technology is compatible with the nüvi.)
- 9 Touch to adjust the volume.
- 10 Touch to use the tools, such as settings and Help.

*nüvi 1460 Quick Start Manual*

## Setting Up Your nüvi

### Mounting Your nüvi


1. Remove the clear plastic from the suction cup. Place the suction cup on the windshield.
2. Flip the lever back toward the windshield.
3. Snap the cradle onto the suction cup arm.
4. Plug the vehicle power cable into the back of your nüvi.
5. Plug the other end of the vehicle power cable into a power outlet in your vehicle. Your unit should turn on automatically if it is plugged in and the vehicle is running. Follow the on-screen instructions.
6. Fit the bottom of your nüvi into the cradle.
7. Tilt your nüvi back until it snaps into place.

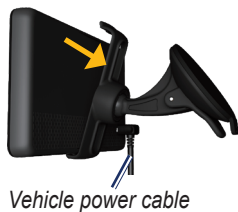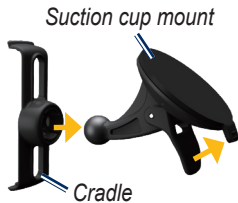

**WARNING:** This product contains a lithium-ion battery. To prevent damage, remove the unit from the vehicle when exiting or store it out of direct sunlight.



## Acquiring Satellites

1. Go outdoors to an open area, away from tall buildings and trees.
2. Turn on your nüvi.

Acquiring satellite signals can take a few minutes. The  bars indicate satellite strength. When at least one of the bars is green, your nüvi has acquired satellite signals.

## Using the Power Button

Press and quickly release the **Power** button to view additional options:

- Touch  and  to adjust the screen brightness.
- Touch **Lock Screen** to prevent accidental screen touches.
- Touch **Power Off** to turn off your nüvi. You can also turn off the nüvi by holding the **Power** button for 2 seconds.

## Resetting Your nüvi

If your nüvi stops functioning, reset your nüvi by pressing and holding the **Power** button for 10 seconds.

## Finding Points of Interest

1. Touch **Where To? > Points of Interest**.
2. Select a category and a subcategory, if necessary.
3. Select a destination, and touch **Go!**.
4. If necessary, touch **Start** to navigate the route.




 

To enter letters contained in the name, touch **Where To? > Points of Interest > Spell Name**.

To search for a location in a different area, touch **Where To? > Near**.

## Using the On-Screen Keyboard & Handwriting Pad

When an on-screen keyboard appears, touch a letter or number to enter it.



Touch  to add a space. Touch  and  to move the cursor.  Touch to delete a character. Touch and hold  to erase the entire entry. Touch Mode to select the keyboard language mode. nüvi 1460 supports keyboards in English, Japanese, Portuguese, simplified Chinese, and traditional Chinese.

You can also use the on-screen handwriting pad to enter characters in English, simplified Chinese, and traditional Chinese.

 


## Following Your Route

Your route is marked with a magenta line. As you travel, your nūvi guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your nūvi recalculates the route.

Touch and drag the map to view a different area of the map.

A speed limit icon could appear as you travel on major roadways.

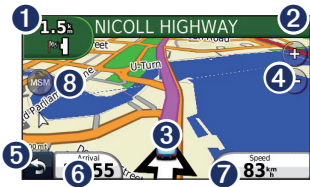

- 1 Touch to view the Next Turn page and the fullscreen Junction page (if available).



- 2 Touch to view the Turn List page.
- 3 Touch to view the Where Am I? page.
- 4 Touch and to zoom in and out.
- 5 Touch to return to the Main menu.
- 6 Touch to change the data field.
- 7 Touch to view the Trip Computer.
- 8 The MSM icon will show when there is only Malsingmaps activated for navigation.

## Adding a Stop

1. While navigating a route, touch > **Where To?**.
2. Search for the extra stop.
3. Touch **Go!**.

4. Touch **Add as Via Point** to add this stop before your final destination.

## Taking a Detour

1. While navigating a route, touch .
2. Touch .

## Using Hands-Free Features

Bluetooth wireless technology is available on some nüvi models.


To use the hands-free features, you must pair your phone and your nüvi. To pair and connect, your device and the nüvi must be turned on and near each other.

## Pairing Your Phone

1. Enable the Bluetooth component on your phone.
2. On your nüvi, touch **Tools** > **Settings** > **Bluetooth**.

3. Touch the button below **Bluetooth**, and touch **Enabled** > **OK**.
4. Touch the button below **Phone**.
5. Select your phone, and touch **OK**.
6. Enter the Bluetooth PIN (**1234**) for your nüvi in your phone.

## Calling a Number

1. From the Main menu, select **Phone** > **Dial**.
2. Enter the number, and touch **Dial**.
3. To end a call, touch  > **End Call**.

## Receiving a Call

When you receive a call, the Incoming Call window opens.

- Touch **Answer** to answer the call.
- Touch **Ignore** to ignore the call and stop your phone from ringing.

## Charging Your nüvi

- Connect the vehicle power cable.
- Connect the USB cable.
- Connect an AC adapter (optional accessory).

## Securing Your nüvi

1. Ensure that you are at your security location and that your nüvi is receiving satellite signals.
2. Touch **Tools** > **Settings** > **Security**.
3. Touch the button below **Garmin Lock**.
4. Enter a four-digit PIN.
5. Touch **Set**.



---

**NOTE:** If you forget your PIN and your security location, you must send your nüvi to Garmin to get it unlocked. You must also send a valid product registration or proof of purchase.

---

## More Information

For more information about your nüvi, select **Tools** > **Help**. Download the latest version of the owner's manual from [www.garmin.com.sg](http://www.garmin.com.sg). For information on accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.

Garmin®, the Garmin logo, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Lock™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. microSD™ is a trademark of SanDisk or its subsidiaries.

